



How to set pin codes remotely

Danapad pin codes can be set remotely via My.Danalock.com. The Danabridge creates a connection between the Danalock and My.Danalock.com. Without Danabridge V3 you cannot use My.Danalock.com to administrate pin codes remotely. Pin codes can be set by the domain owner and created administrators.

Danalock V3 must be connected to Danapad V3 and Danabridge V3.

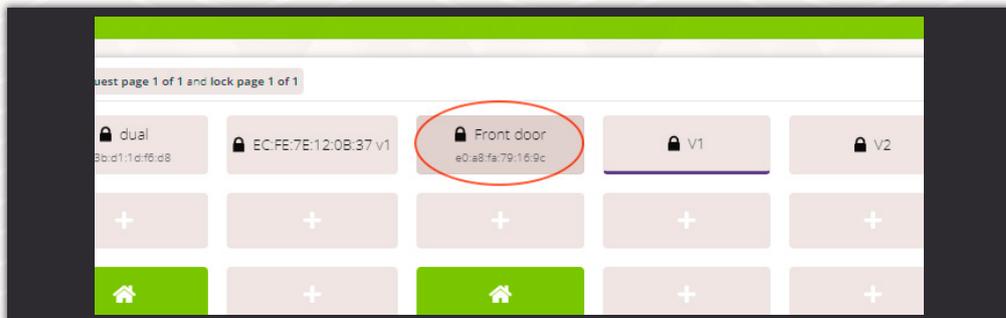


To create or edit pin codes click on the cell with the lock device opening the *Modify lock* view.

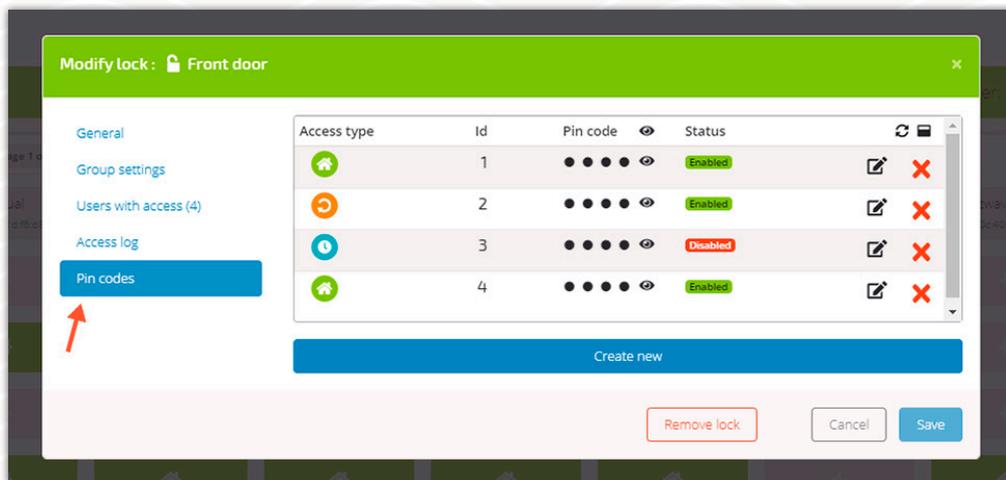


Press *Pin codes*.

If you have already set up pin codes on your Danapad, you will see a table listing the codes in the right side of the *Modify lock* view.

You can set up to 20 pin codes, 4 to 10 digits.

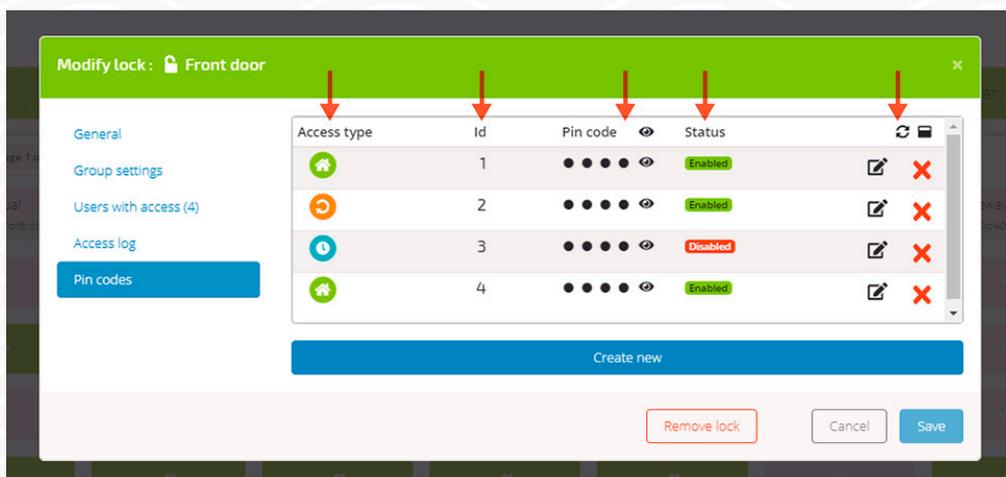


Access Type shows if the pin code is *permanent*, *recurring* or *temporary*. The pin code has an *ID* for easy recognition. Pressing the eye will *show/hide* the pin code. *Status* shows if the pin code is enabled or disabled. At the far right you can *edit* and/or *delete* the pin code.

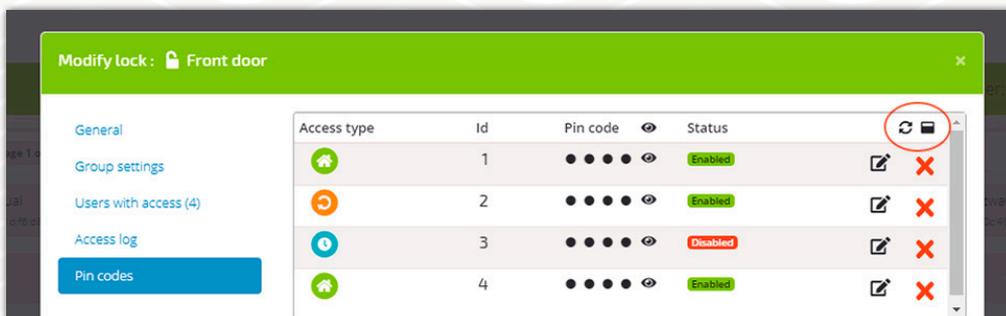

In the table header you can manually refresh the list of pin codes and expand or collapse the list.

Create/edit a pin code

To add a new pin code press the "Create new"-button. If you want to edit an already existing pin code press the "Edit"-button in the pin code overview.

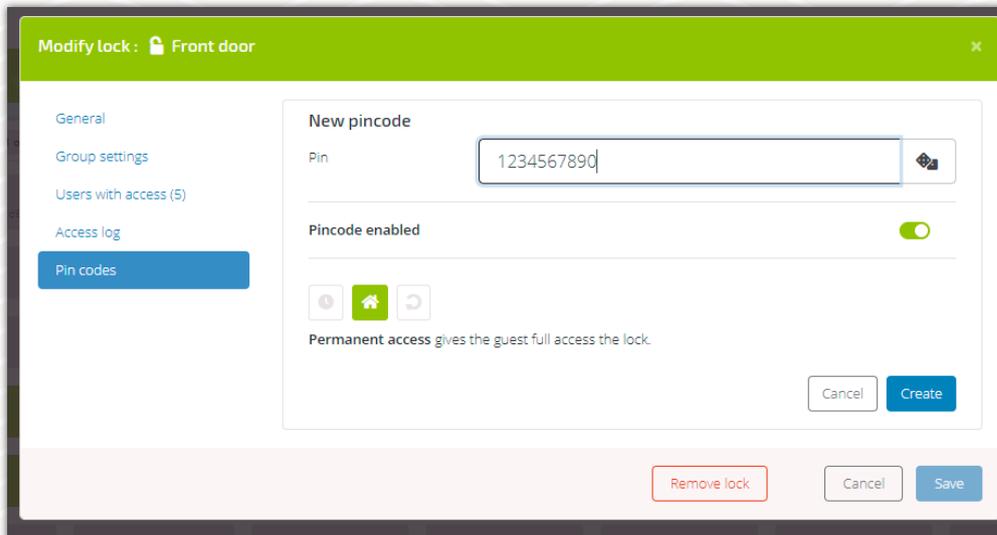

Choose pin code


Set a pin code of your choice (4 to 10 digits) or let the system create a random one by pressing the dice.

Enable or disable pin code

Enable or disable the pin code. When creating a new pin code this option is set to enabled.

Choose access type

Pin codes are per default set to *permanent*, but you can also create *recurring* or *temporary* access pin codes.

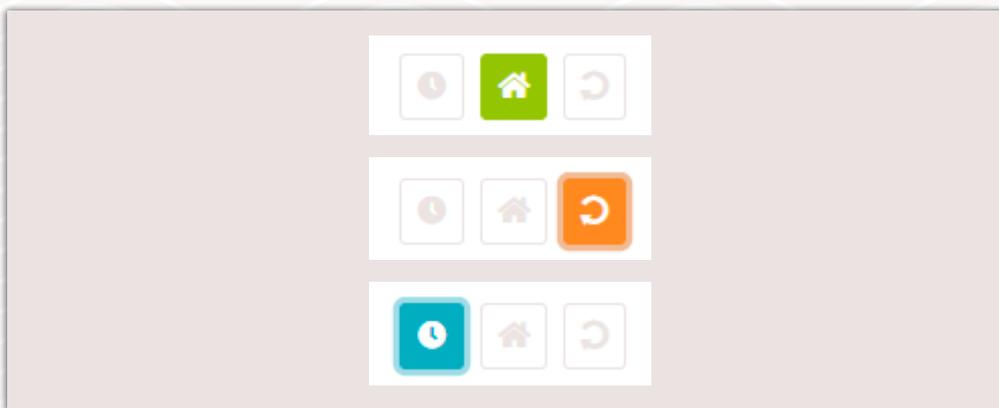

Permanent access grants the user full access to a lock device.

Recurring access grants the user access to a lock device in a repeating weekly pattern of your choice.

Temporary access grants the user one-time access to a lock device on a specific date and time.

Press the "create/save"-button.

To use time restricted pin codes the time zone of the Danalock first has to be set. If it's not set, go to *Modify lock* view > *General* of the Danalock to set it.