

Outdoor unit single user manual



Content

I. Product structure · · · · · 1
II. Product parameters 1
III. Operating instructions 2
IV. System information 2
V. Wiring diagram ····· 3
VI.Operating instructions on Wi-Fi network connection ······ 3
VII. APP instructions ····· 8
VIII. Installation instructions 9
IX. Operating instructions for nameplate placement



Matters needing attention

a.Test before installation

Open the package, check whether the accessories are complete, use the original test cable for the outdoor unit and indoor unit, whether it work normally, and then install.


Note: The wiring must be strictly in accordance with the connection diagram of the manual, otherwise the function not be used normally, or even damage the equipment; please refer to the purchased access control power supply manual for the use of the access control power supply, which is not included in the set.

b.Maintenance

1.Don't use it with any product not produced by our company;

2.Users shall follow the user manual strictly to install and test the product.Please call our company for technical support if you have any question.


VIII.Installation instructions

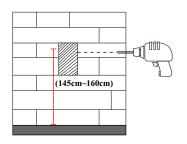

1.Determine the location and height for installing; the reference height is 145-160cm from the Camera center toground;


2.It's required to avoid installing the outdoor unit at any place with strong direct sunlight;3.Locate the position and groove the wall with a

percussion drill, with a depth of about 3 cm;

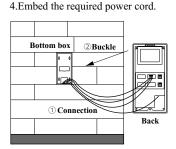


1.Correctly connect power cable to wiring terminals on the back of outdoor unit ;

2.Buckle outdoor unit into the bottom box that has been fixed on the wall.

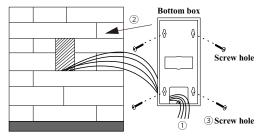


- Route the power cable through the built-in bottom box of outdoor unit;
- 2. Arrange and finish power cord and fix the bottom box on the wall slot position;
- 3. Attach the box to the wall with expansion screws.

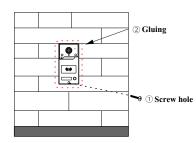

 Fix the outdoor unit with screws
Seal the periphery of outdoor unit with sealant to ensure waterproof edges;
The installation is completed.

IX.Operating instructions for nameplate placement

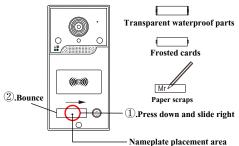

①.You can fill in floor / name plate and other information as you like.

(2).Press down the middle area of the transparent part and slide right;


③.The transparent piece bounces, and remove the

built-in transparent card and paper;

④.Fill in the information and put it back into the card slot to complete the operation.

VII.APP instructions

A)Introduction of functions on the APP interface

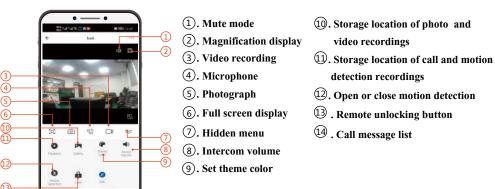

Note: One account for one device only. Please delete the bound device before connected to new account; otherwise, the new device may fail to be added.

B).Add members

a).Take out the mobile phone bound with the device, enter the APP, click "My" in the lower right corner \rightarrow select "Family management" \rightarrow select the created family group \rightarrow "Add members" \rightarrow invite members to join through "WeChat", and click on the members you want to invite to "Share" the invitation code.

b). The invited members shall also download the "TuYa smart" APP and log in (without binding the device) \rightarrow click "My" in the lower right corner \rightarrow select "Family management" \rightarrow join a family \rightarrow open "WeChat" to view the invitation code \rightarrow return to the APP and enter the invitation code.

c).On the bound mobile phone, click "Family management" \rightarrow select family \rightarrow view the newly added family members \rightarrow the number marked with "Family owner" is the main number \rightarrow you can click family members for editing \rightarrow there are functions of "Family role" / "Remove from family", etc.

d).Newly added members shall click the "Home page" \rightarrow click "My home" on the upper left corner to select "Home name" to keep the home on top.

e).The dominated administrator of a family can share and add unlimited mobile phone users, and remotely monitor and view the outdoor conditions with 5 mobile phones at the same time.

B)How to open motion detection


Click the motion detection icon to open it. Any moving object will automatically open its recording function, and click the icon again to close the motion detection.

8

C)Playback function

Only the recordings of calls and motion detection can be played back.

I.Product structure

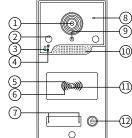


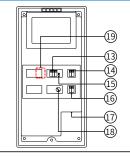


Figure 1

1	HD camera	11	White indicator light representing standby status
2	Infrared night vision light	12	Call button
3	Green indicator representing unlocking status	13	Pressing type conductive signal port
4	Blue indicator representing standby status	14	Pressing type electric lock port
5	Green indicator representing swiping/ adding user card status	15	Reset the management card toggle switch
6	Red Indicator representing deleting user card/ unregistered card Status	16	Pressing type DC15V 1.2A power portort
7	White indicator representing door number	17	Network cable port
8	Microphone	18	Unlocking delay regulator
9	Night vision sensor	19	Built-in TF card, supporting up to 128GB
10	Speaker	15	(Rear cover to be disassemble)

II. Product parameters

Camera	2 megapixel		
Power supply	Outdoor unit power supply(15V 1.2A)/national standard POE power supply		
Power	Standby: ≤ 3W		
IC card frequency	13.56MHz		
Camera angle	120 ° Wide-angle		
Night vision sensitivity	0.001 Lux		
Night vision distance	10M		
Night vision function	Infrared night vision		
Working temperature	-30 °C ~60 °C		
Waterproof class	IP65		
Installation method	Embedded installation		
Integral unlocking time	1-208		
Material	Aluminum alloy+ABS engineering plastic		
Unlocking type	Mobile phone APP remote unlocking/IC card swiping/ NFC		
Number of IC cards	2000 PCS		
Card reading time	1s		
Size	173*85*41mm		



III.Operating instructions

A. Restore factory settings

After connecting the device correctly, Power on for 10 seconds \rightarrow The blue indicator light flashes slowly in standby status (Figure 1.4) \rightarrow Press and hold the call button for 10 seconds until the blue indicator light goes out \rightarrow Release the button \rightarrow The blue indicator light enters slow flashing again \rightarrow The factory settings are restored successfully.

B.Learn to create management cards

Note: Before the following steps, please read the operation steps carefully. If there is no continuous operation action within 10 seconds during the operation process, the system will automatically exit the operation interface after the system "Didi" twice. If the operation fails, it needs to be re operated.

a) Registration management card

First, when the outdoor unit is not connected, Down-toggle learning management card switch (Figure 1.15) \rightarrow Then connect the outdoor unit (buzzer "Drip" once) \rightarrow The green indicator light flashes (Figure 1.5), swipe the first additional card (green card) (buzzer "Drip" once) \rightarrow Swipe the second deleted card (red card) (buzzer "drip" once) \rightarrow The outdoor unit power off \rightarrow Dial the learning management card switch up and reset \rightarrow The management card is completed.

b) Add user card

Swipe the additional card (green card) (buzzer "Drip" once, and the green status indicator in the IC card swiping area is long on) \rightarrow Swipe the blank card again (buzzer "Drip" once, and if you want to add multiple user cards at the same time, you can continuously swipe the blank card) \rightarrow Swipe the additional card (green card) again to confirm (buzzer "Drip" twice, and the green light goes off to complete the addition)


c) Delete User Card

Swipe the deleted card (red card) (buzzer "Drip" once, and the red status indicator in the IC card swiping area is long on) \rightarrow Swipe the card to be deleted again (buzzer "Drip" once) \rightarrow Swipe the deleted card (red card) again to confirm (buzzer "Drip" twice, and the red light goes off to complete the deletion)

d) Delete all user cards


Swipe the deleted card (red card) (the buzzer "Drip" once, and the red status indicator in the IC card swiping area is long on) \rightarrow Swipe the additional card (green card) again, and the buzzer "Drip" once. Swipe the deleted card (red card) again to confirm (the buzzer "Drip" once, and the red light flashes quickly) \rightarrow The buzzer "Drip" continuously for 7 times, then the user card is all cleared and deleted.


IV. System information

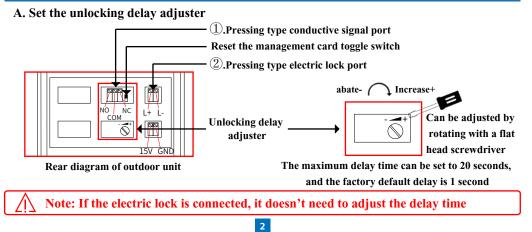

E).Method 3(Router Wired Network Connection)


Connect network cable to machine and power on \rightarrow Connect network cable to router \rightarrow Connect phone and router in the same WIFI

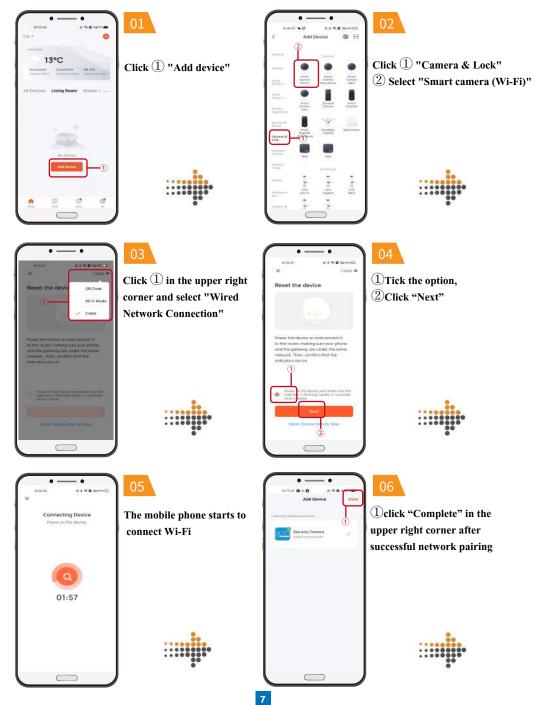

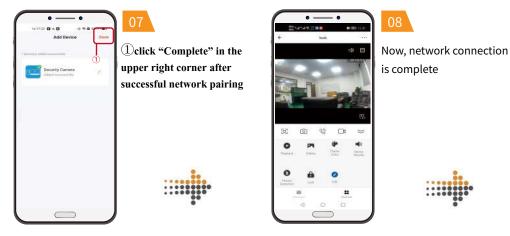


D).Method 2(POE Switch Wired Network Connection)

Power on POE switch \rightarrow Connect network cable to outdoor unit \rightarrow Connect network cable to switch \rightarrow Connect phone and router in the same WIFI(as shown in Figure 3)

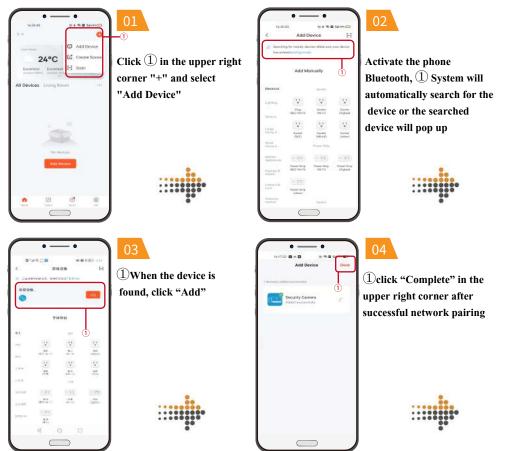


V.Wiring diagram

A).Wiring Diagram of Entry Electronic control lock

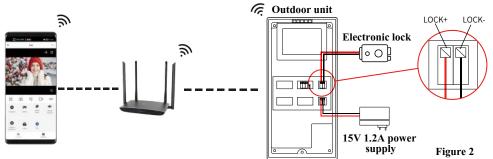

B).Wiring diagram of door access control system

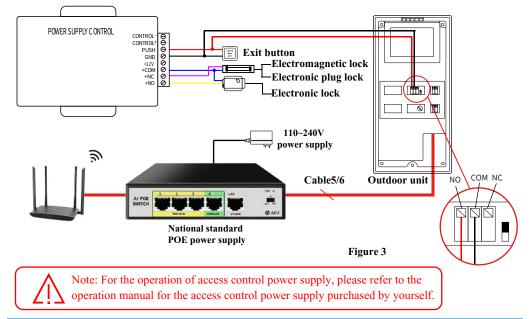


VI.Operating instructions on Wi-Fi network connection

A).Download TUYA APP and complete the registration.



B).Create a Family Group

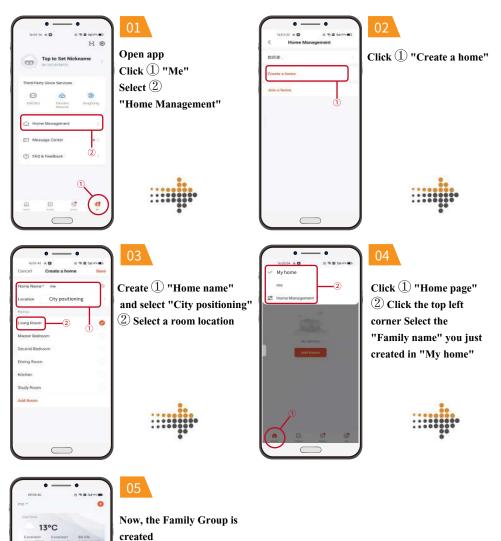

C).Method 1(Wireless Network Connection)

Power on the machine (as shown in Figure 2) \rightarrow Standby indicator flashes (as shown in Figure 1.4), and Startup tone is heard \rightarrow Open TUYA APP \rightarrow Follow the following steps.

